

## Skyline 4" Fascia

### Fabrication & Installation Instructions



<b><i>Components Needed</i></b>	<b><i>Page 2</i></b>
<b><i>Tools Needed</i></b>	<b><i>Page 2</i></b>
<b><i>System Diagram</i></b>	<b><i>Page 3</i></b>
<b><i>Instructions</i></b>	
<b>Step 1: Install Brackets</b>	<b>Page 4</b>
<b>Step 2: Install Pre-assembled Shade</b>	<b>Page 4</b>
<b>Step 3: Install Fascia Clip</b>	<b>Page 4</b>
<b>Step 4: Cut and Attach Fascia Panel</b>	<b>Page 5</b>
<b>Step 5: Attach Bracket Covers</b>	<b>Page 5</b>
<b>Step 6: Install Tension Device</b>	<b>Page 5</b>
<b>Completed Shade</b>	<b>Page 5</b>

## Skyline 4" Fascia


### Components Required

Quantity	Description	Item #	Image
1	Assembled Roller Shade (Skyline clutch and idler inserted into tube, fabric and Safety Hold device attached)	NA	
2	Skyline 4" Fascia Brackets	SLBKT4XX	
2	Bracket Covers	SLFCVR4XX	
1	4" Fascia Panel	SLSF4XX16	
2	Fascia Clips	SLFBKTCLP4	

### Tools Required


Screwdriver/Power Drill	Ladder
Screws	Eye Protection
Measuring Tape	Gloves
Level	Needle Nose Pliers (in case you need to remove clip)

## Skyline 4" Fascia System Diagram

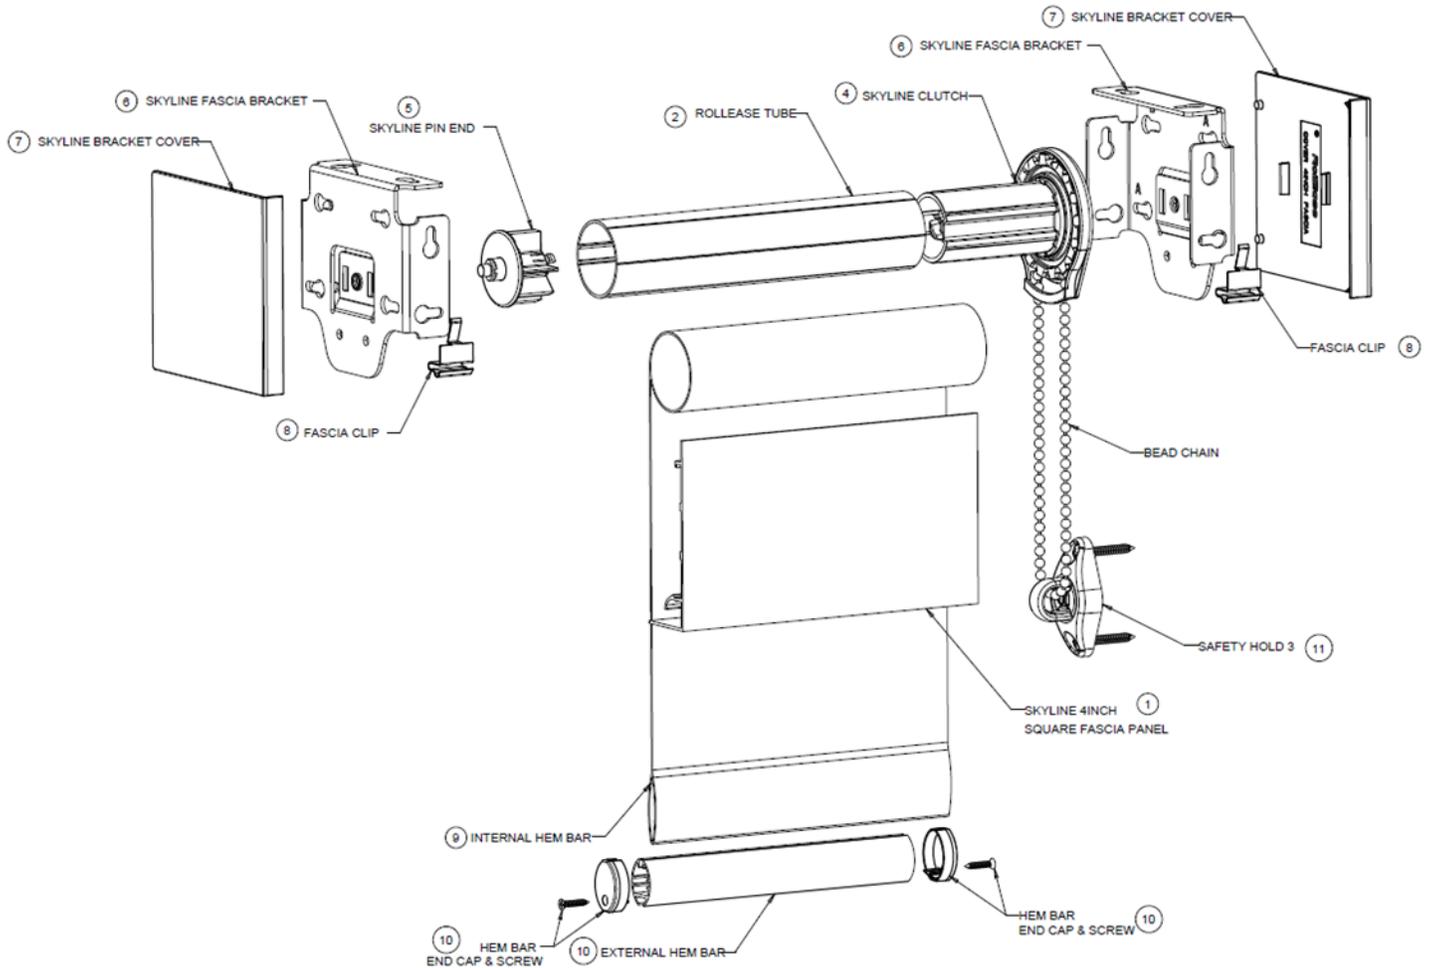

1	Skyline 4" Fascia Panel
2	Tube
3	Fabric
4	Skyline Clutch (SL10, SL15, SL20, or G200)
5	Pin End
6	Skyline 4" Fascia Brackets
7	Skyline 4" Bracket Covers
8	Fascia Clips
9 or 10	Internal Hembar or External Hembar with cap and screws
11	Safety Hold3 – Tension Device (or other WCMA compliant tension device)

## Skyline 4" Fascia System Diagram

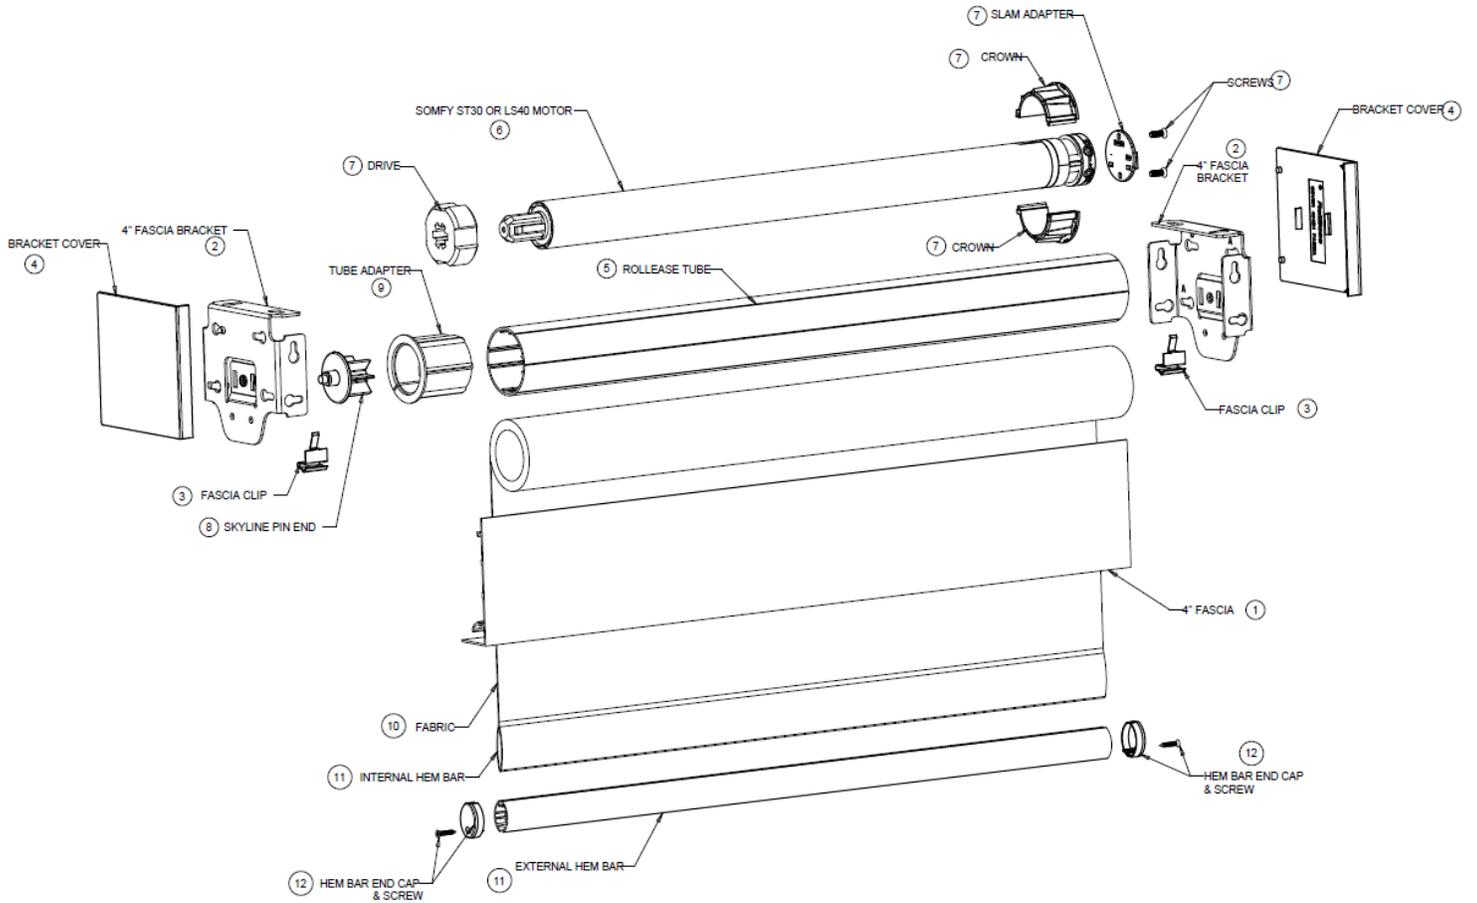

1	Skyline 4" Fascia Panel
2	Skyline 4" Fascia Brackets
3	Fascia Clips
4	Skyline 4" Bracket Covers
5	Tube
6	Somfy ST30 or LS40 Motor
7	Drive
8	Skyline Pin End
9	Tube Adapter
10	Fabric
11	Internal or External Hem Bar
12	Hem Bar End Cap and Screw

### Fabrication & Installation Instructions

#### Step 1: Install Brackets – Inside Mount Shown Below

1a. Hold the mounting bracket in position in the window and mark the location where the first 2 screws should be positioned (diagonally). Then partially screw in both screws where marked with appropriate anchoring system.

1b. Slip the mounting bracket over the two screws and slide the bracket sideways until the screw heads capture the bracket. Fully tighten these screws. Install additional screws if needed.

1a.



1b.



#### Outside Mount

Note that brackets can be used for an outside mount or inside mount (top, side or back).

#### Step 2: Install your Skyline roller shade (pre-assembled)


2a. Install shade per your normal process (generally pin end into one bracket first, then compress slightly as you hook Skyline clutch hooks securely into center slots on facing bracket). Then adjust the shade position as desired.

#### Step 3: Install the Fascia Clips

3a. Insert tab of the clip into the bottom hole in the bracket as shown.

3b. With your thumb, push until you hear a click (see arrow).

3a.

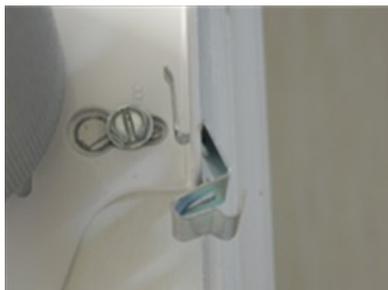

3b.



### Fabrication & Installation Instructions

#### Step 4: Cut and Attach Fascia Panel


Fascia may be cut to the exact desired length. No deductions or notching is required if you are using SL10, SL15, SL20, or G200. Should you elect to use SL30, notching will be needed. See step 4a. below.

4a. Notch the fascia ONLY IF USING SL30 clutch.

4b. Hook the fascia from the top of each bracket.

4c. Gently press fascia down and snap into the fascia clip at the bottom of the bracket.

4a.

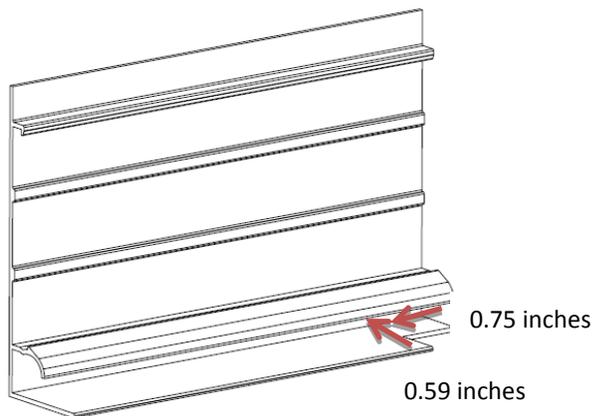

4b.



4c.



#### Step 5: Attach Bracket Covers (for Outside Mount Only)

5a. This shows the bracket with fascia attached, before attaching bracket cover.

5b. Snap on the bracket cover so that the return wraps around the front edge of the fascia (see arrow). This will help to hide an uneven cut.

5a.



5b.



#### Step 6: Install Tension Device

If using Safety Hold3, please see instructions on [rollease.com](http://rollease.com).

## Skyline 4" Fascia Fabrication & Installation Instructions

### Trouble shooting - How to remove the fascia (disengage clips)

1. Hold the bottom of the fascia with two hands, one near the clip & bracket.
2. Pull the fascia down and away from the bottom of bracket to disengage the fascia from the clips. You will now be able to lift the fascia to disengage it from the top of the bracket.



### 3. Pull clips out of bracket.

- a) With clip properly installed
- b) Shimmy clip into screw head opening
- c) Twist sideways and pull out of large opening

